



SPC810

## SMART Popcorn Cart

Instruction Manual and Recipes



## THE SMART CHOICE

Visit [www.smartworldwidefun.com](http://www.smartworldwidefun.com) for more fun products.

# CONTENTS

SAFETY . . . . .	2
IMPORTANT PRECAUTIONS . . . . .	3
INTRODUCTION. . . . .	4
FEATURES & OPERATIONS. . . . .	5
CLEANING & MAINTENANCE. . . . .	6
RECIPES . . . . .	7-8
TROUBLESHOOTING . . . . .	9
TRANSPORTATION & STORAGE . . . . .	9
TECHNICAL SPECIFICATIONS . . . . .	9
RETURNS & WARRANTY . . . . .	10

# SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

**Appliance Specifications:**  
220-240 V, 50/60 Hz, 1500 W



# IMPORTANT PRECAUTIONS

Please read the entire user manual before using the product and then save it for future reference. We reserve the right for any necessary changes made to technical data.

This product is for household use only.

- Please keep these instructions, the guarantee slip, the receipt and if possible the box with inner packaging in a safe place!
- This appliance is intended exclusively for private and not for commercial use.
- Always switch off the machine and remove the plug from the socket when the appliance is not in use or when you are attaching accessories, when cleaning it or in the event of a malfunction. Do not pull the cable, pull the plug.
- When conducting installation or maintenance, please follow these instructions carefully to ensure the safe use of this appliance.
- Keep the packing material out of reach of the children to avoid any accident.
- This appliance could be only operated by the person who is familiar with the unit.
- Do not rinse the equipment in water.
- Clean the surface of the stainless steel and services periodically with appropriate method to prevent any damage brought by oxidation.
- The machine should be put on a stable, levelled and firm surface. Avoid direct contact with sunlight or rain. Do not place on or near a hot gas or electric burner.
- The machine needs to be plugged into 210-240V dedicated circuit to operate properly. When using an electrical appliance, basic safety precautions should always be followed.
- The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- Always attach the plug to the appliance first, then plug the cord in the wall outlet. To disconnect, turn any control "off" then remove the plug from wall outlet.
- Ensure that the cable does not hang down.
- Do not repair the appliance yourself, but consult an authorised professional instead.
- Keep the appliance and the cable away from heat, direct sunlight, moisture, sharp edges and such like.
- Never leave the appliance unsupervised if it is in use! Always switch off the appliance if you are not using it, even if only for a brief period.
- Only use original parts.
- Never use the appliance outdoor.
- Remove the plug from the socket immediately if it is moist or wet. Do not touch the water!
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Only use the appliance for its intended purpose.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.

- The outer surface may get hot when the appliance is operating.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Do not place the appliance anywhere near inflammable objects (e.g. curtains, wood, etc.)!


# SAVE THESE INSTRUCTIONS!

## INTRODUCTION

Thank you for purchasing the SMART POPCORN CART, a product of SMART Worldwide. This 61 ½" tall vendor-style popcorn cart will be the hit of every party. It pops up to 24 cups of hot, fresh, kettle cooked popcorn per batch. The SMART POPCORN CART is designed for both home and commercial use. It features a large, stainless steel kettle with a built-in stirring system and kernel catcher to keep unpopped kernels out of each perfect batch. There is a compartment in the base of the unit to store supplies, making it easy to keep the cart well stocked and organized. The large 15" wheels makes it easy to manoeuvre and 2 rear wheel locks which is a safety feature. The SMART POPCORN CART has an easy-to-clean design. Its accessible height makes serving a snap.

# FEATURES & OPERATIONS

Before first use, clean the inside of the unit by wiping with a moist, non-abrasive sponge, towel or cloth and then wipe with a non-abrasive dry towel. Wipe down the inside of the kettle and be sure it is properly placed in the brackets before starting.

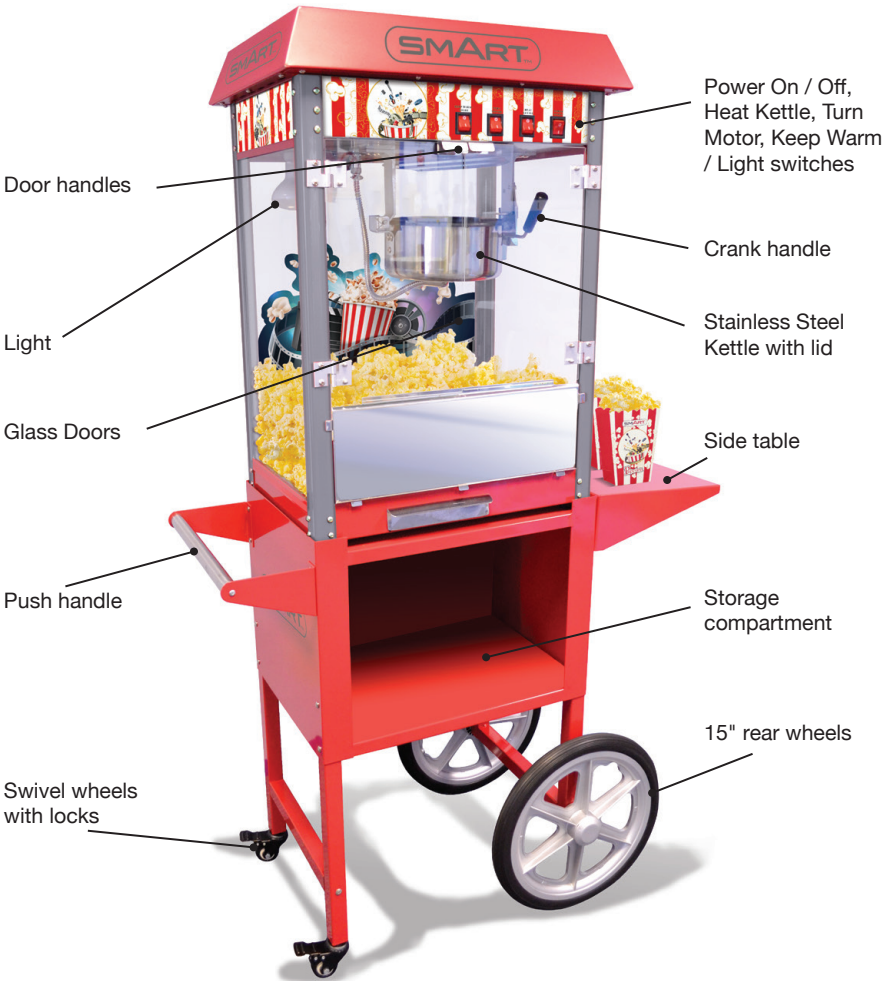



1. Plug in the machine, press the **POWER** button to switch it on.
2. Press **KEEP WARM / LIGHT** button to warm up the base and turn light on.
3. Press the **HEAT KETTLE** switch to preheat the kettle for 5 to 6 minutes. Pour 50ml of oil, 150g of kernels and 50g of sugar, salt or any flavour you may desire. (You may want to turn off kettle once it has heated before adding ingredients.)
4. Close the cover lid firmly.
5. Close the glass doors.
6. Press **HEAT KETTLE** back on if have not already done so and press **TURN MOTOR** button to start the cooking process.
7. It will only take 2 minutes to pop the kernels in a continuous flow.
8. Once done turn off both **TURN MOTOR** and **HEAT KETTLE** buttons.
9. Lift cover lid to the top and twist the crank handle to empty the kettle.
10. Repeat steps 3–8 to make more delicious popcorn.

In no time at all, you will hear the popping begin. Fresh, hot popcorn will begin to burst out of the flip lids on the kettle – just like at the theater!

**Note:**

- **When placing oil in the kettle, be careful not to spill it on the plate.**
- **Ensure to clean the kettle thoroughly after each use.**
- **This machine is equipped with over-heating protection mechanism. Over certain temperature level it will automatically switch off to protect the user and machine. Please wait until it cools down to reuse.**

## **CLEANING & MAINTENANCE**

1. Clean your popcorn machine after every use.
2. Make sure the machine is unplugged and the kettle has completely cooled.
3. Wipe all oils off the inside and outside of the kettle with a DRY clean soft cloth.
4. Do not use, scrubbing brushes or chemical cleaners, as these will damage the machine.
5. NEVER immerse the base of machine in water or let water drip inside.

# RECIPES

The SMART POPCORN CART makes hot, fresh, theater style popcorn anytime! Enjoy your freshly popped corn in a variety of ways:

- Regular theater style popcorn – add butter and salt.
- Add a pinch of sugar and salt to popcorn for a sweet kettle corn taste.
- Flavoured popcorn – add seasoning from any gourmet popcorn seasoning kit.

**NOTE:** 1 gallon = 16 cups

Try some of these fun recipes:

## TRADITIONAL POPCORN BALLS

- ½ Cup Popcorn
  - ½ Cup Corn Syrup
  - ½ Cup Granulated Sugar
  - ½ Teaspoon Salt
  - 1 Stick of Butter, softened
- Pop corn kernels using the SMART POPCORN CART as directed on page 6.
- Mix corn syrup, sugar and salt together in pot and dissolve over medium heat for about 3 minutes.
- Add popcorn to pot, stirring and tossing consistently until popcorn is evenly coated at low heat.
- Remove from heat.
- Use softened butter to form balls while popcorn mixture is still warm.
- Wrap individual balls in plastic wrap, tie and store at room temperature.

## PARMESEAN POPCORN

- 1 Gallon of Popped Corn
  - 1 Tsp Garlic Powder
  - 3 Green Onions, finely chopped
  - ½ Tsp Cracked Pepper
  - 1 Tsp Sea Salt
  - 1 Cup Parmesean Cheese, grated (more or less to taste)
  - 3 Tbsps Olive Oil, heated
- Pop corn kernels using the SMART POPCORN CART as directed on page 6.
- Combine garlic powder, green onions, cracked pepper, sea salt and parmesean cheese. Set aside.
- In a large mixing bowl, drizzle hot olive oil over popcorn.
- Toss until well coated.
- Slowly add in dry ingredients while continuously stirring popcorn until well coated.
- You may also shake the dry ingredients over popcorn in a large paper or muslin bag.



## CHUNKY MONKEY

- 1 Gallon Popcorn Pop corn kernels using the SMART POPCORN CART as directed on page 6.
- 1 (12-oz bag) Semi-Sweet Chocolate Chips Melt chocolate chips and peanut butter morsels over stove, as packaging recommends.
- 1 (12-oz bag) Peanut Butter Morsels Line cookie sheet with wax paper.  
Toss together popcorn and banana chips.
- 1 (4.2 oz bag) Banana Chips, broken into small pieces Spread popcorn and banana chip mixture evenly over cookie sheet.
- 1 (11-oz bag) Peanuts Drizzle melted chocolate and peanut butter mixture over popcorn and banana chips.  
Sprinkle peanuts over chocolate and peanut butter mixture.  
Allow to cool.  
When chocolate and peanut butter has hardened, break up the Chunky Monkey into pieces.  
Can be stored in plastic freezer bags.

## POPCORN PEPPERMINT BARK

- 1 Gallon Popped Corn Pop corn kernels using the SMART POPCORN CART as directed on page 6.
- 1 (12-oz bag) Semi-Sweet or Dark Chocolate Chips Melt chocolate chips over stove, as packaging recommends.  
Line cookie sheet with wax paper.
- 1¼ cup Peppermint Sticks, crushed Spread popcorn evenly over cookie sheet.  
Drizzle melted chocolate over popcorn.  
Sprinkle crushed peppermints over chocolate.  
Allow to cool.  
When chocolate has hardened, break up Popcorn Peppermint Bark into pieces.  
Can be stored in plastic freezer bags.

# TROUBLESHOOTING

<b>Problem</b>	<b>Cause</b>	<b>Solutions</b>
Lights are off while turned on.	The power cord is not properly plugged into the outlet or the machine.	Turn off all switches and make sure the power cord is firmly plugged into the outlet and machine. Turn on the switch again.
The motor does not rotate/heat when the TURN switch is on.	The heating tube line is loose/ burnt.	Tighten the line/change the heating tube.
The heating temperature is too high or too low.	The constant temperature element is out of order.	Change the element.

# TRANSPORTATION AND STORAGE

The unit should be handled with care to avoid damage to the glass. The unit should not be transported sideways. The unit should not be placed in an outdoor area, do not let the unit be in contact with direct sunshine and rain. It should be put in storage which has good ventilation and has no corrosive gases present.

# TECHNICAL SPECIFICATIONS

Model	SPC810
Output Power	1500 W
Temperature	220°C - 260°C / 428°F - 500°F
Maximum Oil Capacity	50 ml
Maximum Flavour Capacity	50 g
Maximum Kernels Capacity (uncooked)	150 g
Electrical	220-240 V, 50/60 Hz
Efficiency	1/2 pan/min
Dimensions (WDH)	940 x 420 x 1560 mm

# RETURNS & WARRANTY

**SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY WITH THE PROOF OF PURCHASE.**

## **SMART Popcorn Cart / SPC810**

Should you have any questions, please contact the retailer where you purchased the item.

### **Exclusively Manufactured and Distributed by:**

SMART Worldwide  
(an SMA Worldwide Ltd. Company)  
SMA House,  
Langley Waters, Home Park  
Kings Langley, WD4 8LZ,  
Hertfordshire,  
United Kingdom.  
Phone: Please see website for details.  
Web: [www.smartworldwidefun.com](http://www.smartworldwidefun.com)

Email: [sma@smagm.com](mailto:sma@smagm.com)

### **Customer Service Enquiry**

To submit a Customer Service enquiry, go to [www.smartworldwidefun.com](http://www.smartworldwidefun.com) and fill out the Customer Service enquiry form and click the Submit button.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact the seller as the first port of call.

### **This warranty does not apply to re-manufactured merchandise.**

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information visit us online at [www.smartworldwidefun.com](http://www.smartworldwidefun.com)



@SMARTWorldwide1



@SMARTWorldwide



smartchoice007



SmartWorldwidefun





Exclusively Manufactured & Distributed by:

SMART Worldwide  
(an SMA Worldwide Ltd. Company)  
SMA House, Langley Waters, Home Park  
Kings Langley, Hertfordshire, WD4 8LZ  
SMART Worldwide Ltd 2021 ©  
[www.smartworldwidefun.com](http://www.smartworldwidefun.com)



Model: SPC810

SMART Worldwide (an SMA Worldwide Ltd. Company)  
have a policy of continuous improvement  
and we reserve the right to change specifications without notice.  
SMART is a registered trademark of SMA Worldwide Ltd. London, England.  
[www.smartworldwidefun.com](http://www.smartworldwidefun.com)  
© SMART Worldwide 2021