



SWG3000

SMART Waffle/Grill 3-in-1

Instruction Manual

THE SMART CHOICE

Visit www.smartworldwidefun.com for more fun products.

CONTENTS

IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3-4
INTRODUCTION	4
PARTS	5
HOW TO USE	6
HELPFUL TIPS	6
ASSEMBLY	7
CLEANING & CARE	8
STORAGE	8
RETURNS & WARRANTY	9

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

220-240 V ~ 50/60 Hz, 1200 Watts



IMPORTANT PRECAUTIONS

1. NEVER immerse appliance or cord in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the appliance.
4. NEVER leave appliance unattended while in use.
5. NEVER place anything other than what is intended to be cooked in the appliance.
6. Unplug appliance from outlet when not in use and when cleaning.
7. DO NOT place appliance in dishwasher.
8. Keep out of reach of children.
9. This appliance is NOT A TOY.
10. This appliance is not intended for use by young children or the cognitively challenged without supervision.
11. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. DO NOT touch hot surfaces.
3. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
4. To protect against risk of electrical shock, do not immerse cord, plugs or appliance in water or any other liquid.
5. To avoid fire or shock hazard, or damage to the unit, this unit should be plugged into a polarised 220-240 Volt AC outlet ONLY.
6. DO NOT operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if it is dropped or damaged in any manner. Return the appliance to the nearest authorised service facility for examination, or to a repair shop for electrical or mechanical adjustment.
7. The appliance manufacturer does not recommend the use of accessory attachments other than what is supplied with the unit. They may cause injuries.
8. Close supervision is necessary when any appliance is used by or near children.
9. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
10. DO NOT overload wall outlet or extension cords, as this can result in a risk of fire or electric shock.
11. This appliance should not be used for purposes other than stated in the instructions accompanying this appliance.
12. DO NOT leave unit unattended while in use or when plugged into an outlet.

13. Unplug from outlet when not in use and before removing parts for cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
14. A short power-supply cord or detachable power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Do not let cord hang over edge of table or touch hot surfaces.
15. Always plug cord into wall outlet before operation. There is no on/off switch. To turn off, remove plug from wall outlet. Allow unit to cool completely before putting away.
16. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. Exception: An extension cord or longer detachable cord is not recommended for use with this appliance.
17. If a long detachable power-supply cord or extension cord is used: 1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance; 2) If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord; and 3) The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.
18. This appliance has an approved plug. **Do not attempt to modify the plug in any way.**
19. Extreme caution should be used when moving an appliance with hot food.
20. Do not attempt to service this appliance yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. Use a plastic or wooden kitchen utensil to carefully remove from unit.
22. Extreme caution as food will be very hot when opening and closing the lid on this unit. Use an oven mitt or pot holder when opening and closing the Lid for safety.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the SMART Waffle/Grill 3-in-1! The ceramic plates for even heat disbursement and nonstick cooking surface ensure perfectly bake every time! The sleek black/brushed metal design will complement any countertop. With the SMART Waffle/Grill 3-in-1, making delicious waffles/sandwichs/grill has never been more fun!

This Product is for household use only.

No user-serviceable parts inside. Refer servicing to qualified service personnel.


A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a long cord. An extension cord may be used with care, however, the marked electrical rating should be at least as great as the electrical rating of this appliance. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled on by children or tripped over.

PARTS




Instructions for use

1. This appliance is designed for making sandwiches, waffles and grilled food.
2. This appliance is equipped with cooking plates with an anti-stick coating .
3. Twin indicators for power on and ready.

 **Steam may be released from appliance during cooking. For your safety, avoid contact with steam, as it is very hot and can cause burns.**

First use

1. Make sure that there is enough room around the appliance, so that the heat can escape and the air can circulate.
2. Clean the appliance. Check the instructions in the section Instruction for cleaning.
3. Put the appliance on a stable and flat surface.
4. Pour a few drops of vegetable oil on the cooking plates.
5. Plug in the SMART Waffle/Grill 3-in-1. Both red and green lights will switch on.
6. Turn the temperature control dial to set the desired temperature. It will start heating.
7. When the preheating is done and the appliance is ready for baking, the green light will turn off.
8. After use pull the plug out of the socket and let the appliance cool down completely.

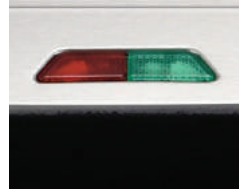

HELPFUL TIPS

 **NEVER leave the unit unattended while operating.**

Smoking

During first use, you may notice slight smoking or a slight odour; this is normal with most new appliances. The smoking and odour is caused by the residues burning off the nonstick Cooking Plates and the Heating Element. Allow the appliance to preheat until smoke and odour no longer exists.

Nonstick Cooking Plates

Each time you use your SMART Waffle/Grill 3-in-1, it is recommended that you coat the Cooking Plates lightly with a small amount of vegetable oil. Vegetable oil can be applied with a paper towel or with a nonstick oil spray.

Only use heat-resistant, non-metal utensils when operating this unit. Metal utensils could scratch or damage the nonstick cooking griddle.

ASSEMBLING & DISASSEMBLING

Before assembling or disassembling anything, unplug the SMART Waffle/Grill 3-in-1 and wait until the appliance has cooled down completely.

⚠ Caution: Do not let the cooking plates come into contact with any metal cutlery or other metal objects to avoid damaging of the anti-stick coating.

Assemble the cooking plates you want to use, this is how you do the assembling.



Locking pin

Slot the locking pins of the bottom baking plate to the hinges and press down the plate to lock in place. You should hear a clicking sound to confirm it is in place. Do the same for the top cooking plate.



Release buttons

To remove the cooking plates, press the buttons on the sides of the appliance to release the cooking plates.

CLEANING & CARE


Please take care of your SMART Waffle/Grill 3-in-1 by following these simple instructions and precautions. Cleaning is a snap.

- Disconnect from the electrical outlet by unplugging the appliance.
- Make sure the appliance is cool before cleaning.
- Clean the upper and lower Nonstick Cooking Surfaces with a damp, non-abrasive cloth and dry.
- Wipe the exterior with a damp, non-abrasive cloth and dry.
- DO NOT put any parts in a dishwasher.
- NEVER immerse appliance or cord in water.

It is that simple!

STORAGE

- Always unplug the SMART Waffle/Grill 3-in-1 before storage.
- Always make sure the SMART Waffle/Grill 3-in-1 is cool and dry before storing.

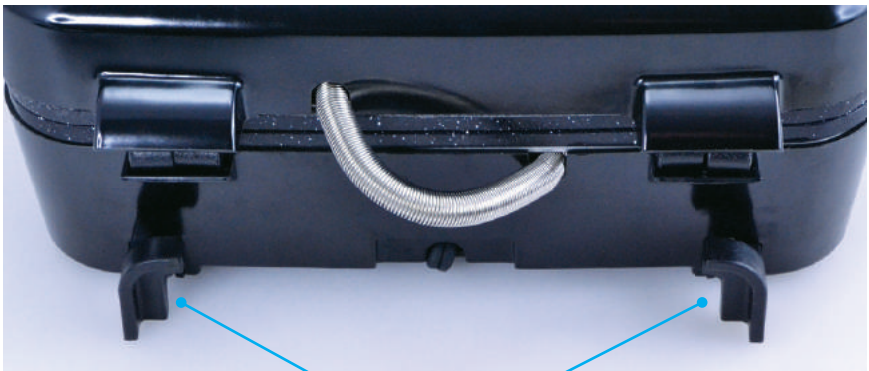

Integrated cord storage

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY WITH THE PROOF OF PURCHASE.

SMART Waffle/Grill 3-in-1 / SWG3000

Should you have any questions, please contact the seller.

Exclusively Manufactured and Distributed by:

SMART Worldwide
(an SMA Worldwide Ltd. Company)
SMA House
Langley Waters, Home Park
Kings Langley, WD4 8LZ
Hertfordshire
United Kingdom
Phone: Please see website for details
Web: www.smartworldwidefun.com
Email: sma@smagm.com



Customer Service Inquiry

To submit a Customer Service inquiry, go to www.smartworldwidefun.com and fill out the Customer Service Inquiry form and click the Submit button.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact the seller as the first port of call.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.smartworldwidefun.com

 @SMARTWorldwide1

 @SMARTWorldwide

 smartchoice007

 SmartWorldwidefun



Exclusively manufactured & distributed by:
SMART Worldwide
(an SMA Worldwide Ltd. Company)
SMA House, Langley Waters, Home Park
Kings Langley, Hertfordshire, WD4 8LZ
SMART Worldwide Ltd 2021 ©

www.smartworldwidefun.com



Model: SWG3000

SMART (an SMA Worldwide Ltd. Company) have a policy of continuous improvement and we reserve the right to change specifications without notice.

SMART is a registered trademark of SMA Worldwide Ltd. London, England.

www.smaworldwide.com
© SMA Worldwide Ltd. 2021