



CFF1000

SMART Cascading Chocolate Fountain Instructions & Recipes

Make every day a party!

Visit www.smartworldwidefun.com for more fun products.

CONTENTS

IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3
INTRODUCTION	4
PARTS & ASSEMBLY	5
HOW TO OPERATE.	6
HELPFUL TIPS	6
CLEANING & MAINTENANCE	7
RECIPES	8
RETURNS & WARRANTY	9

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

220-240 V~, 50 Hz, 150-190 Watts



IMPORTANT PRECAUTIONS

1. NEVER use a scouring pad on the unit.
2. NEVER leave unit unattended while in use.
3. NEVER place anything other than the intended ingredients in the base bowl.
4. NEVER use near water.
5. NEVER touch tower with fingers while machine is on, nor while it is still hot.
6. Unplug unit from outlet when not in use and when cleaning.
7. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
8. DO NOT put Base in dishwasher.
9. Keep out of reach of children.
10. This appliance is NOT A TOY.
11. This appliance is not intended for use by unsupervised young children or cognitively challenged individuals.
12. Young children should be supervised while product is in use to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. This appliance is intended for household use only.
3. DO NOT TOUCH moving parts.
4. To protect against electrical shock do not immerse cord, plug or any part of the Base in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before removing parts for cleaning.
7. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
8. The manufacturer does not recommend the use of accessory attachments. Use of attachments may cause injuries.
9. DO NOT use outdoors.
10. DO NOT let the cord touch hot surfaces.
11. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving this appliance.
13. This unit must be on a level surface to operate properly.
14. DO NOT use this appliance for other than its intended use.

15. DO NOT leave unit unattended while in use or when plugged in to an outlet.
16. DO NOT assemble the Auger or Tower while the motor is running. Make sure unit is unplugged before assembling.
17. DO NOT heat chocolate over 110° F as warping of the towers may occur.
18. Heating Element will get hot. Avoid contact until fully cooled.
19. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
20. Extension cord can be used if care is exercised in use.
21. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
22. This appliance has a polarised plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarised outlet only one way.
23. Keep hands and foreign objects out of the fountain while it is running. Regularly check the Bowl to make sure that it is clear of chunks of fruit, etc. as they will clog the base of the Tower and the chocolate will not flow properly.

INTRODUCTION

Thank you for purchasing The SMART Cascading Chocolate Fountain! This chocolate fountain creates a cascade of sweetness that will add mouth-watering fun to any occasion. Friends and family will enjoy snacks, appetizers and desserts with the SMART Cascading Chocolate Fountain. Use as a beautiful addition to any dining table or create an impressive display at special events. Try a variety of chocolates and sauces to create the flavour you desire.

Try the following:

- Milk Chocolate
- Dark Semi-Sweet Chocolate
- White Chocolate
- Butterscotch
- Liqueurs

Dip strawberries, marshmallows, apple wedges, pretzels, cookies, ice cream balls, peanut butter balls – use your imagination!

PARTS & ASSEMBLY

Your SMART Cascading Chocolate Fountain requires little assembly. Prior to use, wipe out Bowl with a damp cloth and dry. Wash Auger, Tiers, and Tower Cylinders in warm soapy water, rinse, then dry.

After cleaning, return Auger to Base. Make sure Auger is securely in place by aligning the opening on the bottom of the Auger with the Base Pin. Do not attempt to place Auger, Tiers, or Tower Cylinders on Base or remove from Base while the motor is running. Make sure the Tower Cylinders are fitted on the posts in the Base properly.



HOW TO OPERATE

- First, find a stable surface near an electrical outlet before starting. Unit must be level to operate properly and to create the desired flowing effect. Make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord.
- Turn the switch on the right to start the heater on the SMART Cascading Chocolate Fountain. Let the unit warm up for at least 3 – 5 minutes before adding melted chocolate.
- While the machine is warming up, get a microwaveable bowl. Fill bowl with two pounds of chocolate chips (32 ounces) and $\frac{3}{4}$ of a cup of oil. You may need to add more oil to ensure proper flow. If you are using Belgian Chocolate, you do not need to add oil.
- Place in microwave for 2½ minutes. When done, stir chocolate. If necessary, continue to warm chocolate in microwave until melting is complete (another 2 to 2½ minutes).
DO NOT heat chocolate over 110° F as warping of the towers may occur.
- Never add cool or cold liquids to the melted chocolate in the fountain as this will stop the flow.
- Chocolate needs to be completely melted and of thin consistency to allow proper flow. Use a large spoon to test the consistency of the chocolate. If the chocolate drips too thickly from the spoon, add more oil to the mixture.
- Once the chocolate is completely melted and of proper consistency, turn the motor switch on the SMART Cascading Chocolate Fountain to **HEAT** to begin with for 3-4 minutes.
- Then turn the setting to **HEAT MOTOR** position, so the motor and the heater are running at the same time. Carefully pour the melted chocolate into the Bowl at the base of the Tower. The melted chocolate should be drawn under the Tower Cylinders and carried up the Tower by the Auger. Chocolate should then begin to flow from the top of the Tower and cascade evenly down each tier.
- Once chocolate has been flowing for at least 2 minutes, turn motor **OFF** for 30 seconds to eliminate air gaps. Turn the unit back ON for smooth, cascading chocolate effect.
- The SMART Cascading Chocolate Fountain must be level to ensure proper flowing of the chocolate. Be careful not to drop pieces of food into the Bowl which clogs the flow of chocolate.



Note: If you follow the above simple steps, your chocolate experience will be an enjoyable one to share with family and friends, anytime!

HELPFUL TIPS

- If chocolate begins to drip instead of flow down the Tower, the chocolate is too thick. Thin the chocolate by adding vegetable oil. Also, make sure that the unit is level.
- If the chocolate is flowing unevenly, the unit is not level. Make sure that the unit is on a level surface so that the chocolate is evenly distributed.
- If the flow is intermittent, interrupted or not flowing properly, check to see if there are chunks of food in the Bowl of the Base that may be clogging the chocolate flow.
- Never add cool or cold liquid to the SMART Cascading Chocolate Fountain as this will stop the flow of the fountain.
- **DO NOT heat chocolate over 110° F as warping of the towers may occur.**

CLEANING & MAINTENANCE

To prolong the life of your SMART Cascading Chocolate Fountain be sure to follow cleaning instructions after every use. Never use anything abrasive on the base to maintain the original finish.

1. Make sure unit is unplugged before cleaning. Allow parts to COOL to the touch. Tower, Auger, and Base can get VERY HOT!
2. Before first use and continuing after each use, be sure to wash the Tower and Auger thoroughly. AVOID washing parts in the dishwasher.
3. To make cleaning of the SMART Cascading Chocolate Fountain easier, carefully remove the Tower and Auger (after cooling) and wipe off remaining chocolate with paper towels. Wash in warm, soapy water, rinse and dry.
4. Carefully pour out as much remaining chocolate from the Bowl as possible. Use non-abrasive, damp sponge or cloth to wipe clean the rest of the unit. Then, wipe with a non-abrasive towel to dry.

DO NOT POUR OUT EXCESS OR LEFTOVER CHOCOLATE DOWN ANY DRAIN. POUR INTO A PLASTIC BAG OR DISPOSABLE CONTAINER THEN PUT INTO THE GARBAGE.

SMART CONVERSION TABLE

1 cup flour	=	125g flour
1 cup butter	=	225g butter
1 cup brown sugar	=	170g brown sugar
1 cup granulated sugar	=	170g granulated sugar
1 cup icing sugar	=	100g icing sugar
1 cup uncooked rice	=	170g rice
1 cup chopped nuts	=	100g chopped nuts
1 cup fresh breadcrumbs	=	150g fresh breadcrumbs
1 cup sultanas	=	140g sultanas
1 shot	=	1½ ounces (45 ml)
1 cup	=	5.33 shots (239 ml)
10 ounces	=	0.625 pounds

RECIPES

For best results, chocolate should contain 60% cocoa. Any higher percentage of cocoa will require the addition of vegetable oil to thin out the mixture. **DO NOT ADD ANY COLD LIQUIDS TO FOUNTAIN DURING OPERATION.** This will cause your mixture to thicken and not flow properly. Enhance the flavour of your chocolate using liqueurs. Try these delectable chocolate creations:

Orange Chocolate:

Orange Liqueur or Orange Concentrate

Chocolate Hazelnut:

Hazelnut Liqueur

Coffee Chocolate:

Amaretto

Mint Chocolate:

Crème de Menthe

Chocolate Macaroon:

Crème de Coconut

Chocolate Liqueur:

Any Brand of Chocolate Liqueur

To burn the alcohol off of the liqueur:

- Prior to mixing the liqueur with the chocolate, measure ¼ cup of liqueur (more or less depending on taste) and pour into a small cooking pot.
- Cook the liqueur on the stove top and bringing to a boil.
- Mix the liqueur with choice of chocolate before adding to the SMART Cascading Chocolate Fountain

You can also melt cheese to create a cheese fondue fountain. Dip grapes, apples, breads, shrimp, crackers, and pretzels – use your imagination! In order to use cheese, just prepare the cheese as you would for a regular fondue pot by diluting it with white wine or cream to keep it liquid, enabling it to flow through the tower. Powdered cheese may be used as well.

Barbeque sauces may also be used. Try your favourite barbeque sauce and dip cooked chicken cubes, beef/steak cubes, pork cubes or shrimp. Just keep in mind the consistency of the sauce needs to be thin! Use wine, liquor or other liquids to thin the sauce.

Try the SMART

Luxury Belgian Chocolate!

**It is specifically designed for our
Chocolate Fountains!**



RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY WITH THE PROOF OF PURCHASE.

SMART Cascading Chocolate Fountain / CFF1000

Should you have any questions, please contact the seller.

Exclusively Distributed by:

SMART Worldwide
 (an SMA Worldwide Ltd. Company)
 SMA House
 Langley Waters, Home Park
 Kings Langley, WD4 8LZ
 Hertfordshire
 United Kingdom
 Phone: Please see website for details
 Web: www.smartworldwidefun.com
 Email: sma@smagm.com



Customer Service Inquiry

To submit a Customer Service inquiry, go to www.smartworldwidefun.com and fill out the Customer Service Inquiry form and click the Submit button.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact the seller as the first port of call.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.smartworldwidefun.com



@SMARTWorldwide1



@SMARTWorldwide



smartchoice007



SmartWorldwidefun



Exclusively manufactured and distributed by:
SMART Worldwide
(an SMA Worldwide Ltd. Company)
SMA House, Langley Waters, Home Park
Kings Langley, Hertfordshire, WD4 8LZ
SMART Worldwide Ltd 2020 ©

www.smartworldwidefun.com



Model: CFF1000

SMART (an SMA Worldwide Ltd. Company) have a policy of continuous improvement and we reserve the right to change specifications and colours without notice.

SMART is a registered trademark of SMA Worldwide Ltd, London, England.

www.smartworldwidefun.com

© SMA Worldwide Ltd. 2020