



SMB8000

SMART Master Bullet

Instruction Manual

THE SMART CHOICE

Visit www.smartworldwidefun.com for more fun products.

CONTENTS

IMPORTANT SAFETY AND GENERAL INSTRUCTIONS	3
PART	4
PREPARE FOR USE	5
USING THE APPLIANCE	6
CARE AND CLEANING	7
ENVIRONMENT	7
RETURNS & WARRANTY	8

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

220-240 Volts, 50/60 Hz
700 Watts



IMPORTANT SAFETY AND GENERAL INSTRUCTIONS

- Caution! To avoid risk of electric shock, never immerse the cord, plug, or powerbase blender in water or other liquid, nor rinse it under the tap. Only use a moist cloth to clean the motor unit.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Do not pull, twist, or mistreat the power cord.
- Do not allow cord to hang over the side of the counter or table.
- Do not allow cord to touch hot surfaces, including stove.
- Periodically inspect cord and plug for damage. Do not operate any appliance with a damaged cord or plug. If the appliance malfunctions, or is dropped or damaged in any manner, discontinue use. Contact customer service for assistance in obtaining a replacement.
- Avoid contact with moving parts.
- Keep hands and utensils away from the cutting blade while chopping or blending food to reduce the risk of severe personal injury or damage to the device. A scraper may be used, but only when the blender/food chopper is not running.
- Never allow the motor to run for more than one minute at a time, as it can cause permanent damage to the motor. If the motor stops working, unplug the power base and let it cool for an hour before attempting to use it again. Your blender has an internal thermal breaker that shuts off the unit when it overheats. The power base will reset when the unit is unplugged and the thermal breaker cools down.
- To reduce the risk of injury, make sure the blade base is securely screwed onto the cup before placing it on the power base and operating the appliance.
- Never let the appliance run unattended.
- This appliance is intended for household use only.
- Blades are sharp. Handle carefully.
- Check gasket to make sure it is completely seated in the cross blade or flat blade unit before each use.
- The blender is not intended for use in microwave. Do not place the cups, power blasé or accessories in microwave as this may result in damage to the appliance.
- Never blend carbonated beverage. Built-up pressure from released gases can cause container to burst, resulting in possible injury.
- Do not blend the hot liquids in any of the blending vessels.
- Do not run the blender when the cups are empty.
- This appliance is not intended for use by persons (including children) with

reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- If the blades get stuck, unplug the appliance before you remove the ingredients that block the blades.
- **This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.**
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

PARTS

2 Stay-fresh
resealable lids.



1 Tall cup.

1 High-torque
power base.





1 Short cup with 1 handled comfort lip ring.



1 Short cup.



1 Milling blade..



1 Extractor blade.

PREPARE FOR USE

1. Thoroughly clean the parts that come into contact with food before you use the appliance for the first time.
2. Let hot ingredients cool down before you process them (max. temperature 60°C).
3. Cut large ingredients into pieces of approximately 2 cm before you process them.
4. Always place the motor unit on a level surface.

USING THE APPLIANCE

Extracting

1. Fill ingredient into the tall or short cup.
2. Twist on the Extractor blade.
3. Place the cup onto the power base. Press down and twist to lock the motor on.
4. You can see the extraction process happening. Extract your ingredients until you achieve the desired consistency.

Milling

The mill blade is for turning dry ingredients into powders. Perfect for milling oats, nuts and seeds.

1. Fill ingredient into the short cup.
2. Twist on the milling blade.
3. Place the cup onto the power base. Press down and twist to lock the motor on.
4. Mill your ingredients until you achieve the desired consistency.

Shake Technique

Sometimes, if you over fill the cups with ingredients or do not put enough water, the results can increase the density of the mixture. This makes it hard for the ingredients toward the top of the cup to make it down to the blade. If some of your ingredients are having a hard time making it down to the blades, simply use the shake technique.

1. Remove the cup and blade assembly from the power base.
2. With the cup and blade assembly in hand, shake it like a cocktail shaker. Then put it back on the power base.

Tap Technique

For really stubborn ingredients that are clinging to the side of the cup instead of being recirculated into the cutting zone, simply use the tap technique.

1. Take the cup and blade assembly off the power base and tap the cup and blade assembly on the counter to force the ingredients down into the blades.
2. Place the cup and blade assembly onto the power base and finish processing.

CARE AND CLEANING

- Do not immerse the motor unit into water.
- Unplug the appliance before cleaning.
- Wipe the motor unit with a moist cloth.
- Rinse blades (and cups) immediately after use to prevent debris from drying and sticking to vessels – if necessary, use a dish brush to loosen any debris.
- Hand wash with mild dish soap and warm water (not hot).
- Dry immediately.
- For tough debris, fill the cup 1/2 full with warm (not hot), mild soapy water. Then, simply twist on the blade, pop it on the base and give it a run for 30-45 seconds. Follow up with a quick brush.
- Do not put the blades in the dishwasher. Simply hand wash with warm, mild soapy water.
- The blender cups can be washed on the top rack of the dishwasher using the normal (not sanitize) cycle. The blender cups and blades should not be sterilized in boiling water for any reason as this will warp the plastic.
- When washing blades, do not attempt to remove the gasket ring (Rubber ring that creates the airtight seal). Simply hand wash the blades in warm, mild soapy water.

ENVIROMENT

- Meaning of crossed –out wheeled dustbin: do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.
- Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
- When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.



RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY WITH THE PROOF OF PURCHASE.

SMART Master Bullet / SMB8000

Should you have any questions, please contact the seller.

Exclusively Manufactured and Distributed by:

SMART Worldwide
 (an SMA Worldwide Ltd. Company)
 SMA House
 Langley Waters, Home Park
 Kings Langley, WD4 8LZ
 Hertfordshire
 United Kingdom
 Phone: Please see website for details
 Web: www.smartworldwidefun.com
 Email: sma@smagm.com



Customer Service Inquiry

To submit a Customer Service inquiry, go to www.smartworldwidefun.com and fill out the Customer Service Inquiry form and click the Submit button.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact the seller as the first port of call.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.smartworldwidefun.com

Like us on Facebook at www.facebook.com/SMARTWorldwide

Follow us on Twitter at [@SMARTWorldwide1](https://twitter.com/SMARTWorldwide1)

View us on YouTube at www.youtube.com/user/SmartWorldwideFun



Exclusively Manufactured & Distributed by:
SMART Worldwide
(an SMA Worldwide Ltd. Company)
SMA House, Langley Waters, Home Park
Kings Langley, Hertfordshire, WD4 8LZ
SMART Worldwide Ltd 2016 ©

www.smartworldwidefun.com



Model: SMB8000

SMART (an SMA Worldwide Ltd. Company) have a policy of continuous improvement and we reserve the right to change specifications and colours without notice.

SMART is a registered trademark of SMA Worldwide Ltd, London, England.

www.smartworldwidefun.com

© SMA Worldwide Ltd. 2016