



SCFM1000

SMART RETRO COTTON CANDY MAKER
Instruction Manual
FOR HOUSEHOLD USE ONLY

Make every day a party!

Visit www.smartworldwidefun.com for more fun products.

CONTENTS

IMPORTANT PRECAUTIONS 2

IMPORTANT SAFEGUARDS 2

INTRODUCTION 3

PARTS & ASSEMBLY 4

HOW TO OPERATE. 5

HELPFUL TIPS. 6

CLEANING & MAINTENANCE 6

RETURNS & WARRANTY 8

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

220-240 V~, 50/60 Hz, 500 Watts



IMPORTANT PRECAUTIONS

1. NEVER use a scouring pad on the unit.
2. NEVER leave unit unattended while in use.
3. NEVER place anything other than the intended candies or sugar in the Extractor Head.
4. NEVER pour water or any other liquid into the Extractor Head.
5. NEVER put fingers on or near the Extractor Head or Heating Element while machine is on, nor while it is still hot.
6. Unplug unit from outlet when not in use and when cleaning.
7. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
8. DO NOT put in dishwasher.
9. Keep out of reach of children.
10. This appliance is NOT A TOY.
11. This appliance is not intended for use by unsupervised children or cognitively challenged individuals.
12. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge of how to operate this appliance.
13. Young children should be supervised while product is in use to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. DO NOT TOUCH the hot surfaces.
3. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before removing parts for cleaning.
6. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
7. The manufacturer does not recommend the use of accessory attachments. Use of attachments may cause injuries.
8. DO NOT use outdoors.
9. DO NOT let the cord touch hot surfaces.
10. DO NOT pour water or any other liquid into the Extractor Head.

11. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving this appliance.
13. This unit must be on a level surface to operate properly.
14. DO NOT use this appliance for other than its intended use.
15. DO NOT leave unit unattended while in use or when plugged into an outlet.
16. Check inside of the Heating Element, located beneath the Extractor Head, for foreign objects before switching to ON position.
17. Heating Element will get hot. Avoid contact until fully cooled.
18. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
19. Longer, detachable power supply cords or extension cords can be used if care is exercised in their use.
20. The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
21. When using a longer cord or extension cord, make sure that the cord does not drape over a countertop or tabletop where it can be pulled on or tripped over unintentionally.
22. This appliance has an approved plug. **Do not attempt to modify the plug in any way.**
23. Keep hands away from the machine when it is in the ON position and is spinning.
24. Do not operate under windy conditions such as fan, air conditioner or strong natural wind.

INTRODUCTION

The SMART Retro Candy Floss Maker transforms your favourite sugar into fluffy, melt-in-your-mouth cotton candy. Simply plug in, turn on, pour yummy sugar into the center receptacle and start spinning a colourful and tasty treat! This fanciful product is fun for the whole family, and brings out the kid in everyone. Instantly, gatherings are transformed into carnivals and dessert time into party time!

PARTS & ASSEMBLY

Take the SMART Retro Candy Floss Maker out of the box and wipe down the unit exterior and bowl with a non-abrasive cloth or sponge before using.

To attach the Extractor Head, push down onto the stem and make sure that the grooves are properly aligned to fit over the pegs on the stem.

To attach the Bowl, carefully push the bowl down and turn counterclockwise until it locks into place. Then attach Rim to Bowl by snapping in place.

Now you are ready to enjoy tasty, fluffy cotton candy from your SMART Retro Candy Floss Maker.



NOTE: While some images in this instruction manual may differ from your purchased unit, the functionality remains the same.



HOW TO OPERATE

1. First, find a stable surface near an electrical outlet before starting. Make sure the cord is away from any water source. It is acceptable to use an extension cord if needed.
2. Plug in unit at the OFF position.
3. Turn unit to ON position and allow it to run for at least 3-4 minutes before adding candy sugar. Allow appliance to run for at least 10 minutes before adding sugar. This will allow the Extractor Head to warm up.
4. Turn unit OFF and place **no more than** one scoop of flavoured sugar (1 tbsp.) into the Extractor Head. Make sure candies are evenly placed around the Extractor Head.
5. Switch to ON position.
6. When you see the cotton candy web begin, collect the cotton candy on the cone by holding the cone vertically. Rotate the cone with your fingers while you circle the bowl.
7. Once cotton candy has collected on the cone, hold the cone in a horizontal position over the Extractor Head while still rotating the cone with your fingers. Continue turning the cone with your fingers while the cone is in the horizontal position and move from side to side making sure to collect all the cotton candy.
8. Repeat above steps by adding another measure of candy or sugar into the Extractor Head and starting again. The cotton candy should flow more quickly as the unit is sufficiently warm.
9. DO NOT overfill the Extractor Head by adding more than 1 tbsp. of sugar at a time. This will cause clogging and unit will not work properly.
10. By following these simple instructions, using your SMART Retro Candy Floss Maker will be a fun experience for kids of all ages and will bring the excitement of a carnival to any occasion.



HELPFUL TIPS

Machine not working:

Reason 1: whether the wire plug is plugged into the appropriate power supply and whether the contact is good;

Reason 2: the host switch is not open;

If your cotton candy is not flossing properly or is coming out with a brittle, "Easter grass" texture, follow these instructions:

When using sugar:

- Only add 1 tablespoon of sugar at a time.
- Make sure the sugar is level after pouring into the Extractor Head.
- The faster the Extractor Head spins, the better the result.

The following candies DO NOT WORK PLEASE DO NOT USE:

- Sugar-free candies
- Hard candies
- Ball-shaped candies
- Candies with hard sugar shells
- Gummy or chewy candies
- Sugar-pressed candies
- Instant drink mix packets

CLEANING & MAINTENANCE

1. Make sure the unit is unplugged and has had time to cool down before cleaning.
2. After cooling, remove the Extractor Head by firmly gripping both sides and pulling straight up. UNLOCK bowl by turning clockwise and lifting. Wash both in warm water, rinse and dry.
3. Use a clean, slightly damp, non-abrasive sponge or non-abrasive cloth to wipe down the outside of the unit, then wipe with a non-abrasive towel to dry.
4. The SMART Retro Candy Floss Maker breaks down for easy cleaning.
5. Pack the machine when not in use and keep it in a dry and ventilated place out of reach of children.

Feel free to mix and match sugars to invent new flavours. Imagine the variety of flavours you can make and the fun you'll have!



RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY WITH THE PROOF OF PURCHASE.

SMART Cascading Chocolate Fountain / SCFM1000

Should you have any questions, please contact the seller.

Exclusively Manufactured and Distributed by:

SMART Worldwide
 (an SMA Worldwide Ltd. Company)
 SMA House
 Langley Waters, Home Park
 Kings Langley, WD4 8LZ
 Hertfordshire
 United Kingdom
 Phone: Please see website for details
 Web: www.smartworldwidefun.com
 Email: sma@smagm.com



Customer Service Inquiry

To submit a Customer Service inquiry, go to www.smartworldwidefun.com and fill out the Customer Service Inquiry form and click the Submit button.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact the seller as the first port of call.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.smartworldwidefun.com



@SMARTWorldwide1



@SMARTWorldwide



smartchoice007



SmartWorldwidefun



Exclusively manufactured and distributed by:
SMART Worldwide
(an SMA Worldwide Ltd. Company)
SMA House, Langley Waters, Home Park
Kings Langley, Hertfordshire, WD4 8LZ
SMART Worldwide Ltd 2020 ©

www.smartworldwidefun.com



Model: SCFM1000

SMART (an SMA Worldwide Ltd. Company) have a policy of continuous improvement and we reserve the right to change specifications and colours without notice.

SMART is a registered trademark of SMA Worldwide Ltd, London, England.

www.smartworldwidefun.com

© SMA Worldwide Ltd. 2020