



SLS3000

SMART Lazy Susan

Instruction Manual

Life is a Party!

Visit www.smartworldwidefun.com for more fun products.

CONTENTS

IMPORTANT PRECAUTIONS	4
IMPORTANT SAFEGUARDS	4
INTRODUCTION	5
PARTS	5
HOW TO OPERATE	6
CLEANING & MAINTENANCE	6
RETURNS & WARRANTY	7

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

220-240 V , 50-60 Hertz, 800 Watts



IMPORTANT PRECAUTIONS

1. NEVER immerse the electrical base, plugs or cord in water.
2. NEVER leave unit unattended if used near children.
3. NEVER use a scouring pad on the SMART Lazy Susan.
4. NEVER use an abrasive sponge or harsh cleaning products on the SMART Lazy Susan.
5. NEVER use for anything other than what this item was intended.
6. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
7. DO NOT place motor base in dishwasher.
8. Keep out of reach of children.
9. Unplug Warming Tray from electrical outlet when not in use and before cleaning.
10. This appliance is NOT A TOY.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. Do not use outdoors, FOR HOUSEHOLD USE ONLY.
3. This appliance has a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
4. To protect against electrical shock, do not immerse cord, plugs or unit in water.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow the unit to cool down before putting on or taking off parts.
7. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been damaged. Return appliance to the nearest authorized service facility for examination or repairs.
8. Extreme caution must be used when moving The SMART Lazy Susan with hot food or liquids.
9. Do not use this appliance for other than intended use.

10. Do not touch hot surfaces. Use handles or knobs.
11. The cord should be arranged so that it will not drape over the table or counter top in such a way where it can be pulled on by children. This should also reduce the risk resulting from becoming entangled or tripping.
12. Always put place the control knob on "OFF" before plugging into and removing plug from the electrical outlet.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
15. Before plugging your unit into the main electrical supply, make sure the voltage corresponds to that indicated on this manual.
16. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

SAVE THESE INSTRUCTIONS!


INTRODUCTION

Thank you for purchasing the SMART Lazy Susan. Each unit has been manufactured to ensure safety, reliability, and ease of use.

Before use, please read these instructions carefully and save them for future reference.

PARTS

- A. 4 Lids.
- B. 4 Small cooking pans.
- C. Large cooking pan.
- D. Cool touch handle.
- E. Warming Tray.

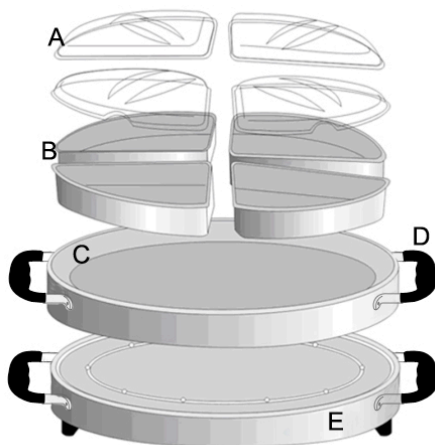

HOW TO OPERATE

ON/OFF Switch with indicator light.



Plug port.

1. Remove the large pan and the 4 small pans to wipe clean the surface of the thermal plate and thoroughly dry.
2. After connecting the cord to the AC Input, plug the cord into an electrical outlet, and switch the power button to On.
3. Place food in each one of the pans. NOTE: Do not place the lids directly on the hot surface of the warming tray. Make sure the lids are placed on their cooking pans.
4. The SMART Lazy Susan will take approximately 15 minutes to reach the maximum temperature. After 15 minutes of charging, the unit can be unplugged from the wall outlet - making it cordless. If unplugged, the SMART Lazy Susan will continue to give off heat for approximately 120 minutes before needing to be plugged in again.
5. Unplug from electrical outlet when not in use.
6. Do not leave food in trays after use. Remove food and liquid quickly for easy clean up and preparation for next use.



CLEANING & MAINTENANCE

Unplug the SMART Lazy Susan from electrical outlet when not in use and before cleaning.

- After allowing the SMART Lazy Susan to cool, remove each pan and lid. Make sure the unit has cooled down before putting on or taking off parts for cleaning. Pans and lids can be cleaned in soapy water. Rinse and wipe to dry. These items are dishwasher safe.
- Wipe the warming tray base unit with a damp cloth.
- NEVER use any abrasive cleaners, scouring pads or harsh cleaning products on the SMART Lazy Susan
- DO NOT place motor base in dishwasher.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY WITH THE PROOF OF PURCHASE.

SMART Lazy Susan / SLS3000.

Should you have any questions, please contact the retailer where you purchased the item.

Exclusively Manufactured and Distributed by:

SMART Worldwide Ltd.
(an SMA Worldwide plc Company)
SMA House,
Langley Waters, Home Park
Kings Langley, WD4 8LZ,
Hertfordshire,
United Kingdom.
Phone: Please see website for details.
Web: www.smartworldwidefun.com
Email: sma@smagm.com



Customer Service Enquiry

To submit a Customer Service enquiry, go to www.smartworldwidefun.com and fill out the Customer Service enquiry form and click the Submit button.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact the seller as the first port of call.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information visit us online at www.smartworldwidefun.com

Like us on Facebook at www.facebook.com/SMARTWorldwide

Follow us on Twitter @[smartworldwide1](https://twitter.com/smartworldwide1)

View us on YouTube at www.youtube.com/user/SmartWorldwideFun



Exclusively Manufactured and Distributed by:
SMART Worldwide
(an SMA Worldwide Ltd. Company)
SMA House, Langley Waters, Home Park
Kings Langley, Hertfordshire, WD4 8LZ
SMART Worldwide Ltd 2016 ©

www.smartworldwidefun.com



Model: SLS3000

SMART Worldwide (an SMA Worldwide Ltd. Company) have a policy of continuous improvement and we reserve the right to change specifications without notice.

SMART is a registered trademark of SMA Worldwide Ltd. London, England.

www.smartworldwidefun.com

© SMART Worldwide 2016